




Kombinationsbeispiel 1

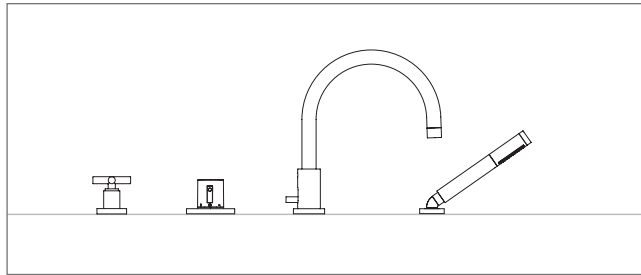

Komplettsset

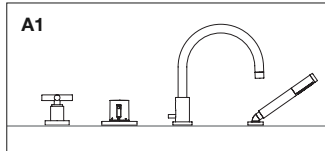


- A1** 1x 34 525 979-FF
 1x 20 000 892-FF
 1x 12 502 970 90
 1x 13 512 892-FF
 1x 27 702 979-FF

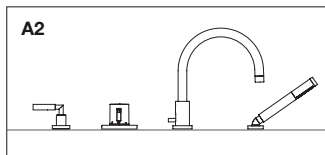


- A2** 1x 34 525 979-FF
 1x 20 000 882-FF
 1x 12 502 970 90
 1x 13 512 892-FF
 1x 27 702 979-FF

Perfecto Montagesystem (optional)

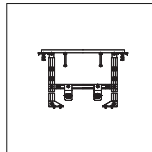


- 1x 12 613 970 90
 1x 12 801 970-FF


Kombinationsbeispiel 2

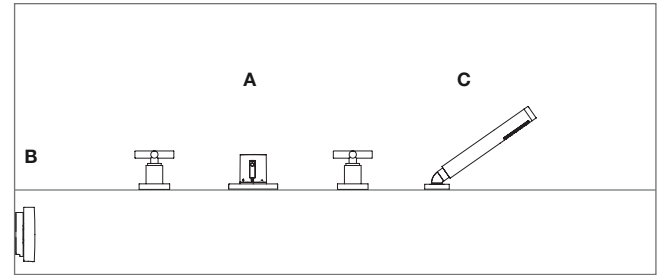

Regeleinheit

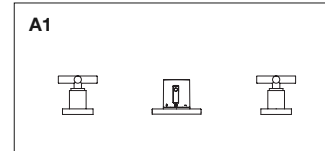


- A1** 1x 34 525 979-FF
 1x 29 140 892-FF
 1x 20 000 892-FF
 1x 12 502 970 90

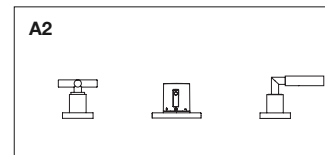


- A2** 1x 34 525 979-FF
 1x 29 140 892-FF
 1x 20 000 882-FF
 1x 12 502 970 90

Wanneneinlauf

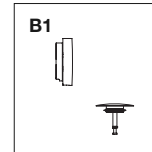


- B1** 1x 36 246 970-FF
 1x 35 247 970 90*
 1x 36 150 970-FF
 1x 35 150 970 90

Handbrause

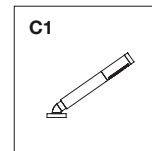

- C1** 1x 27 702 979-FF

Perfecto Montagesystem (optional)

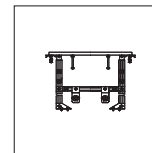


- 1x 12 613 970 90
 1x 12 801 970-FF




Tara.


Kombinationsbeispiel 3

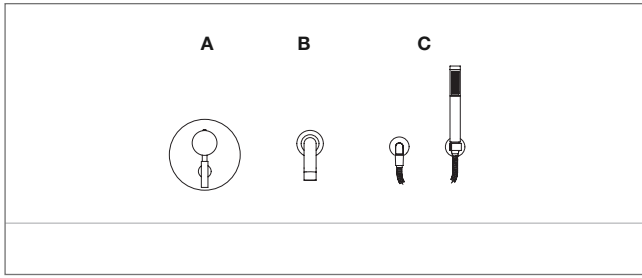


Regeleinheit

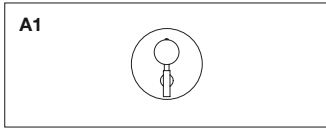

A1 1x **36 115 885-FF**
1x 35 115 970 90


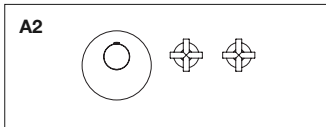


A2 1x **36 416 979-FF**
1x 35 516 970 90
2x **36 310 892-FF**
2x 35 622 970 90

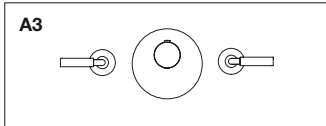

A3 1x **36 416 979-FF**
1x 35 516 970 90
2x **36 310 882-FF**
2x 35 622 970 90



Wanneneinlauf

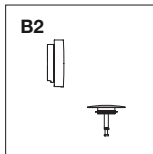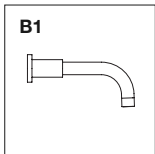

B1 1x **13 801 892-FF**

B2 1x **36 246 970-FF**
1x 35 247 970 90*
1x **36 150 970-FF**
1x 35 150 970 90

Handbrause

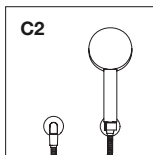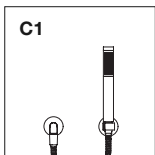

C1 1x **27 802 892-FF**

C2 1x **27 803 892-FF**



Tara.